


POMONA, assembly instructions

- 1) Be sure to put the frame in the right position, front marks are little holes near the big ones

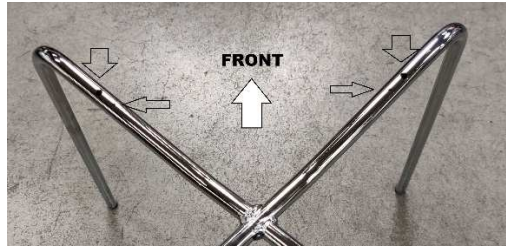

- 2) Put the plastic chair upside down over a flat surface and then the frame (upside down) over it. The frame can not be fixed in wrong position: if you don't see the correspondent hole of the frame over the plastic chair, rotate the frame till it is in the right position
- 3) Insert the rear two screws but do not tight them



- 4) Insert and tight the front two screws



- 5) Tight the rear two screws and the job is done!

